

Billet Stand up bottle bracket instructions



Read all Instructions before beginning!!!!

Caution – EXTREME DANGER – Caution

Do not use or mix any other manufacturer's products with any Nitrous Express products.

Do not use or mix any Nitrous Express products with any other manufacturer's products.

THESE INSTRUCTIONS APPLY TO NITROUS EXPRESS PRODUCTS ONLY!

FOR SANCTIONED RACE USE ONLY - NOT FOR SALE OR USE IN CALIFORNIA

CAUTION: An experienced technician familiar with the use and handling of high-pressure cryogenic gases should install this system. If you have any doubt about your skills this system should be taken to a qualified shop for installation. If you have decided to do the install yourself please read and understand all of these instructions before you start. Some of these instructions may or may not apply to your vehicle, if you have any questions please call our tech department 940-767-7694 9:00A.M.-5:00P.M. CST.

Illustration A



Start by laying out all included parts and get everything sorted out.

Illustration B



Assembling the Bracket

1. Take (5) billet spacers and line them up with the five holes along the top of the base then place the plate on top of the spacers.

Illustration C



2. Using the short Allen head bolts, loosely install the bolts to fasten the bottom plate to the base.

Illustration D



Illustration E



3. Take the 3 remaining spacers and the long Allen head bolts and position them as in Illustration D
4. Tighten the five short Allen bolts as shown in illustration E. This will require the use of a 1/8" Allen wrench (not included).

Illustration F

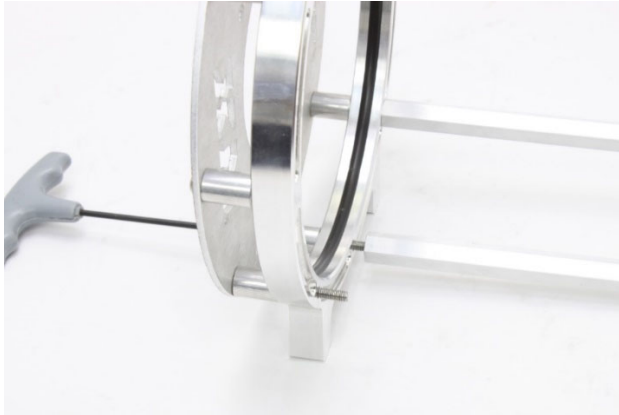


Illustration G



5. This will leave 3 longer screws remaining, you will thread the long hex spacers to these 3 bolts as shown in illustrations F and G.

Illustration H



Illustration I



6. Place the knob through the bottle neck holder and push the o ring all the way down. As in Illustrations H and I.

Illustration J



7. Thread the bottle neck holder to the top of the bracket as in illustration J.

Illustration K



8. Using the 3 remaining short screws, thread the top of the bottle holder to the hex spacers on the base of the bracket.
 - a. If you have the flat mounts, continue to page 6, if you have the bar mount version skip to page 7.

Installing the Flat mounts to the base of the bracket.

Illustration L



9. Take the four $\frac{1}{4}$ " Allen bolts and the mounting rails as shown in illustration L and attach the mounting brackets using a $\frac{1}{4}$ " Allen wrench (Allen wrench not included).

Illustration M



10. Your assembled bracket is now ready to install in your vehicle.

Installing the bar mounts to the base of the bracket.

Illustration N



Illustration O

Illustration P



9. Place the bottom roll bar mount on the base and insert the screws mount from the bottom side of the bar mount clamp
10. Place the washers and nuts on the slotted end of the adjustable mount.

Illustration D

Illustration E



11. Tighten the ¼ Allen bolts and bolt the bar mounts to the bottle bracket.
12. Your bracket is ready to install in the vehicle.